



Note: Seat post must be positioned so that the minimum insertion mark etched in the seat post is at or below the top of the seat tube.

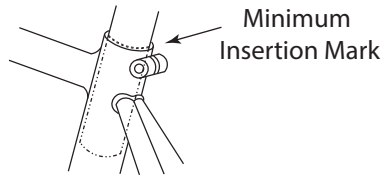

Warning

Failure to install seatposts properly may result in damage to your bicycle, serious injury, and/or death.

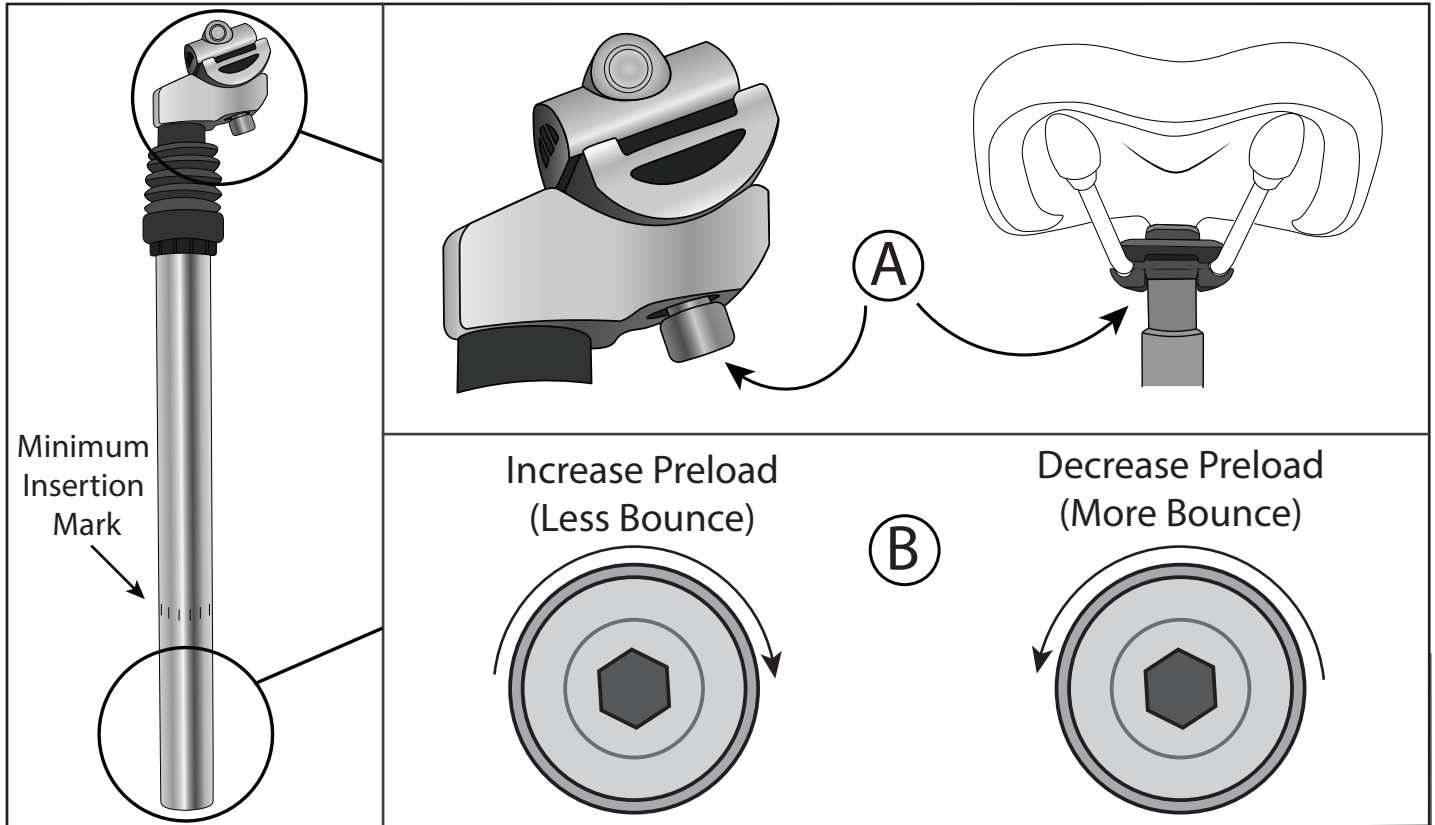

Installation

1. Install seat to seatpost by loosening the clamp bolt (6mm), then securing the seat rails between the clamp (A). [This step is easiest with the seatpost separated from the frame.]
2. Loosen seatpost clamp and remove old seatpost if present. Avoid twisting as it may mar the finish of the seatpost.
3. Install new seatpost by inserting it into the bicycle's seat tube up to the **minimum insertion mark** or beyond.
4. Tighten seatpost clamp to frame manufacturer's recommended torque specs.

Pre-load Adjustment

1. To increase or decrease the preload, remove the seatpost from the frame.
2. Locate the 8mm allen key slot on the bottom end of the seatpost.
3. Using an 8mm allen key, turn clockwise to increase preload, counter clockwise to decrease preload. (B)
4. Re-install the seatpost following the above procedure.