

# Frame Pump


## Instruction Manual

PU003

Please read all instructions before installing and using your frame pump.

**Warning** ⚠

**Do not over tighten the bracket screws.**

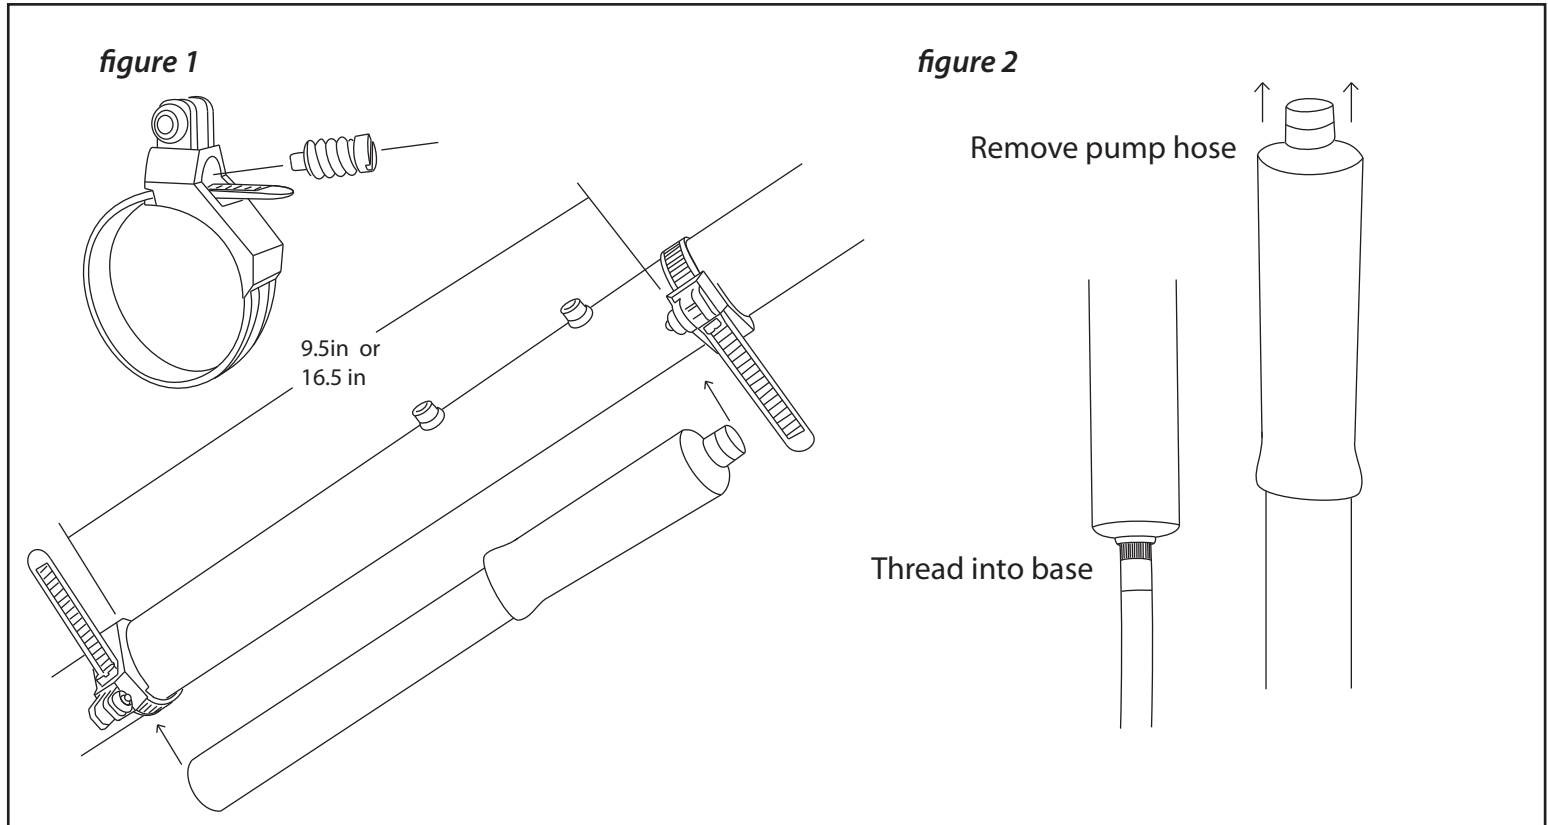

## Installation/Use

### Mounting Your Pump (**figure 1**)

1. Cut the bracket screw off each bracket strap and wrap the straps around the frame. Thread them through the head of the bracket strap.
2. Thread the bracket screw into the bracket strap using a flat head screw driver and tighten down against the frame. Make sure you mount the bracket straps approx. 9 1/2 inches apart for the 9 inch pump and 16 1/2 inches apart for the 16 inch pump.
3. Your pump will sit in between the bracket straps using a spring tension system to keep it in place while riding.

### Using Your Pump (**figure 2**)

1. Remove the pump hose from the pump handle and thread into the bottom of the pump **BY HAND**. **Do not use any tools for this step.** Make sure the rubber seal is sitting flush with the base of the pump to create an air tight seal.
2. Thread the pump hose onto the tube valve and start pumping. Make sure you check the tire's PSI rating before pumping and check the pressure regularly while pumping to ensure that you do not over fill the tire with air.
3. When finished pumping, unthread the pump hose from the valve and bottom of pump and put the pump back into the brackets.