

Cross Levers


Instruction Manual

BL005

Please read all instructions before installing your new brake levers.

Warning

Failure to install brake levers properly may result in damage to your bicycle, serious injury, and/or death.

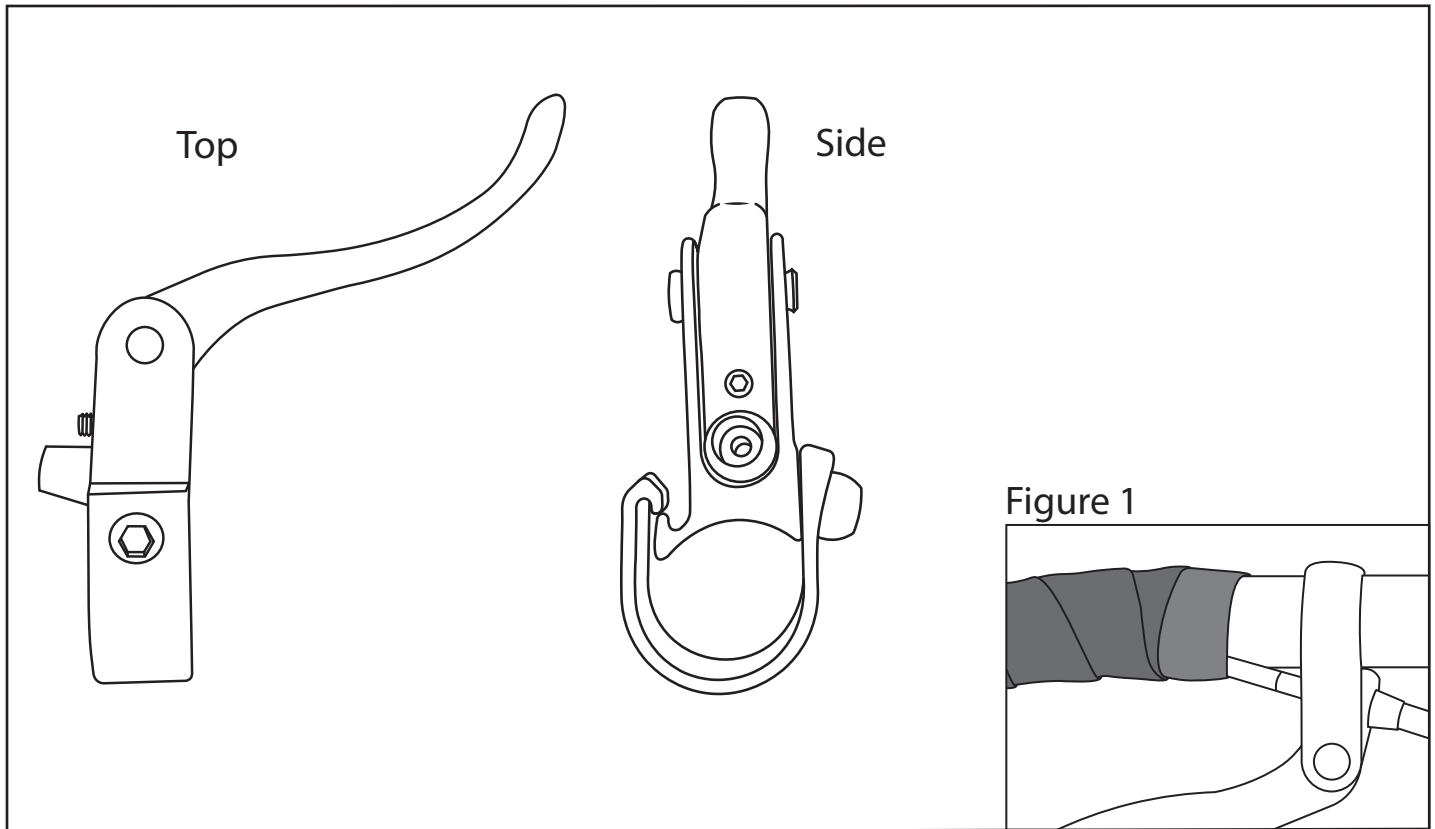

Installation/Use

1. Begin by removing handlebar tape down to the existing brake/shifter lever.
2. Remove brake cable and housing
3. Mount brake lever at a comfortable reach and angle on the handlebar. Tighten to 5 -7Nm.
4. Cut housing to length for each side of the lever, one side goes from the primary lever to the in-line lever and the other to the caliper or cable stop. Use housing ends where the housing meets the in-line lever. Remember, measure twice, cut once.
5. Feed brake cable through first section of housing, the lever, and then the second length of housing.
6. Install and adjust cable at caliper as usual.
7. Secure housing and re-wrap bar tape. Do not wrap tape all the way up to the in-line lever as doing so may stress the housing and cable. **See figure 1.**
8. Check for proper functionality before riding.

SUNLITE