

Dual Cable Brake Lever


Instruction Manual

BL006

Please read all instructions before installing your new Brake Levers.

Warning

Failure to install brake levers properly may result in damage to your bicycle, serious injury, and/or death.

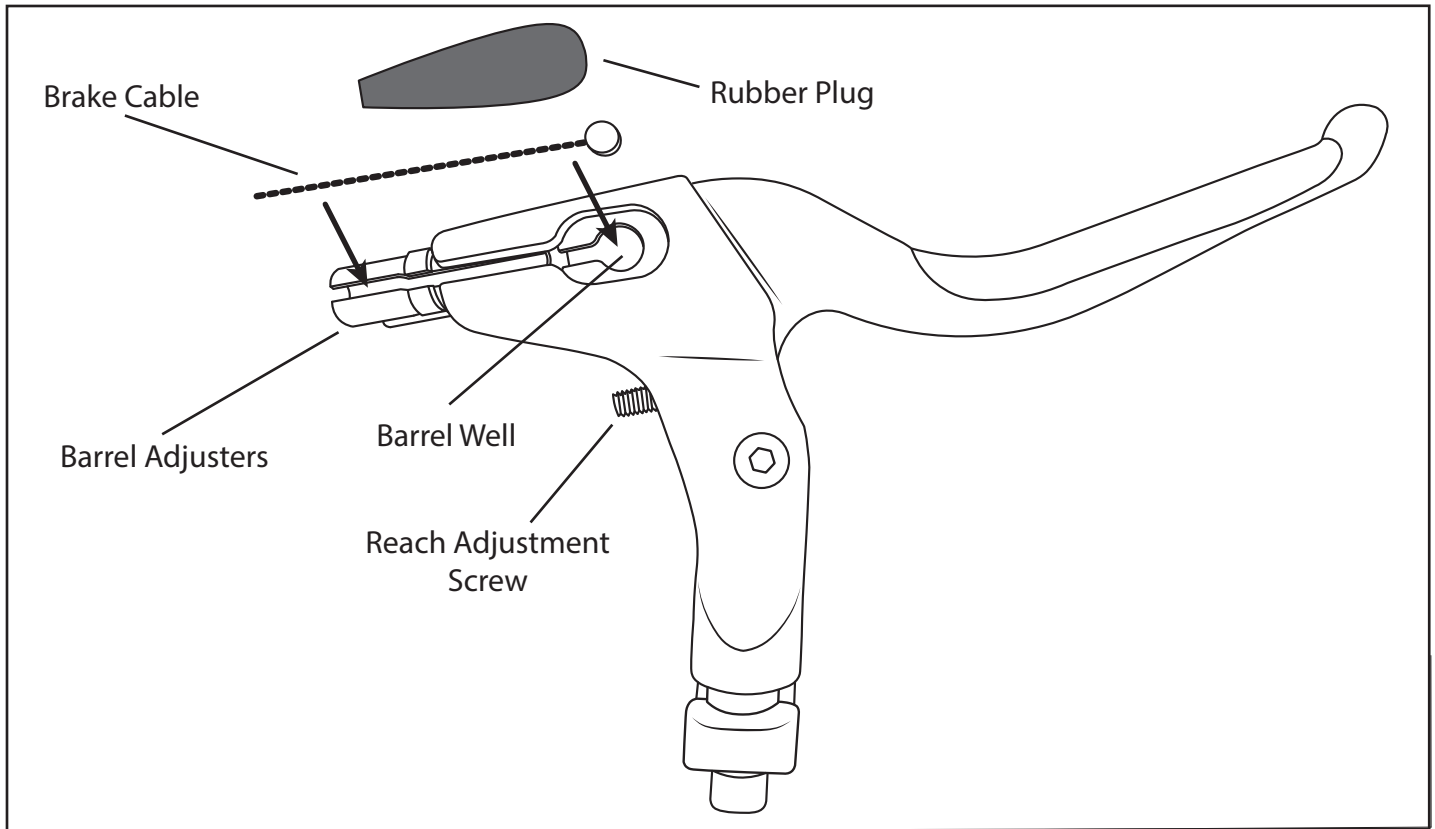

Installation/Use

1. Begin by removing the two bolts on the clamp portion of the lever and positioning the lever in a comfortable and easy to reach position on the handlebar. Tighten to 5 - 7 Nm.
2. Install the brake cable by removing the black rubber plug and aligning the slots in the lever body and barrel adjusters.
3. Install the cable end into the barrel well and route the cable through the slots in the body and barrel adjusters. Then rotate the barrel adjusters so that the slot is not longer aligned.
4. Repeat process for other cable on the other side of the brake lever.
5. Install cable to brake calipers per manufacturers instruction.
6. Replace rubber plug to cover the top side of the cable routing slot. Plug can be used on either side of the lever.
7. Test for functionality before riding.

SUNLITE