
Full Fender

Please read all instructions before installing and using your new fenders.

Additional hardware may be necessary for Installation - Does not include eyelet (M5) or brake mount (M6) bolts.

Instruction Manual

Warning A Failure to install fenders properly may result in serious injury/death and or damage to your bicycle.

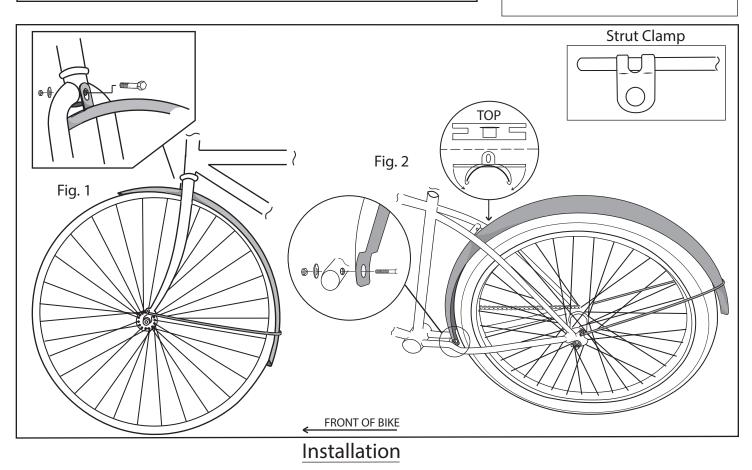

Front - (Figure 1)

- 1. Pass the tabless end of the fender through the fork until the tab is lined up with the fork's brake hole.
- 2. Secure fender to brake hole mount in fork using an M6 bolt or brake caliper mount. (Not included)
- Adjust strut clamp to proper position on the strut and secure to fork using an eyelet bolt. (not included)
- 4. Double check clearance and adjust as needed to ensure there is no contact with the tire.

Rear - (Figure 2)

- 1. Attach strut to fender using supplied nut and bolt.
- 2. Position fender how it will be mounted, aligning end tab to chainstay bridge hole.
- 3. Fasten fender tab to bridge (See Fig 2 inset) (Hardware not included)
- 4. Align optional bridge clip to seat stay brake mount and fold side tabs securely around the fender.
- 5. Install brake bolt to bridge clip and secure.
- 6. Adjust strut clamp to proper position on the strut and secure to frame using an eyelet bolt. (not included)
- 7. Double check clearance and adjust as needed to ensure there is no contact with the tire.

