


Parts List For # 94571 Canopy

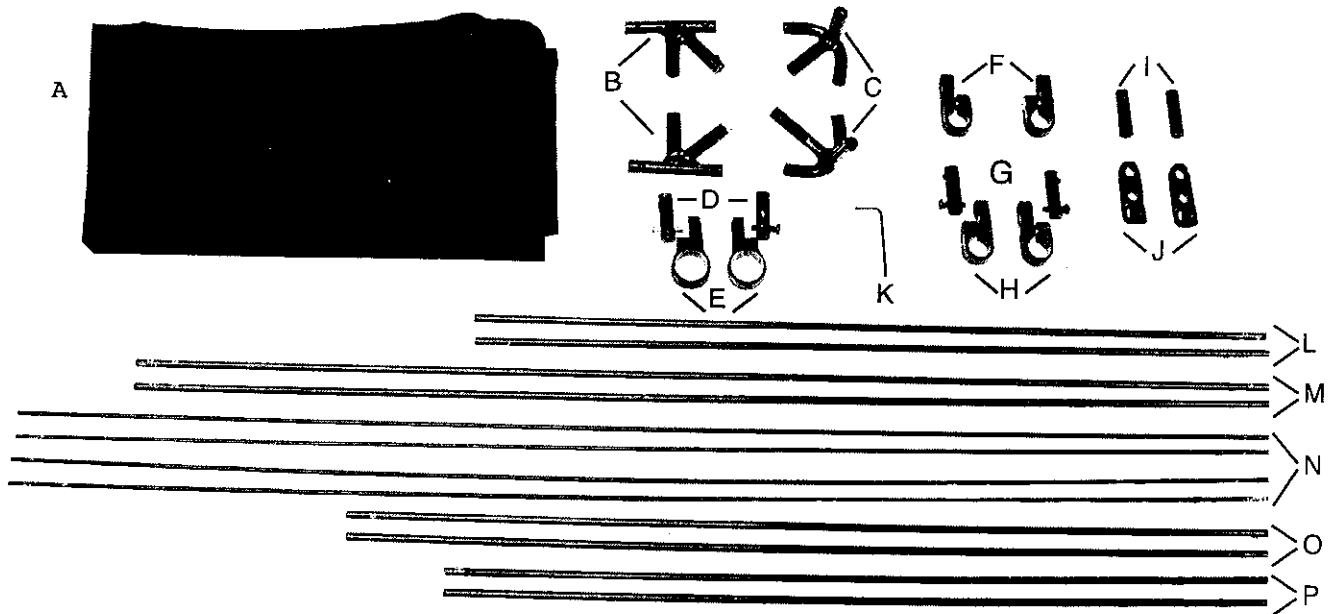

Code	Qty	Description
A	1	Canvas Cover
B	2	Front Corner Adapters
C	2	Rear Corner Adapters
D	2	7/8" Handlebar Brackets
E	2	4mm Front Strut Adapter
F	2	5/8" Short Upper Seat Stanchion Bracket
G	2	6mm Rear Strut Adapter
H	2	5/8" Rear Strut Bracket
I	2	6mm Couplers

Code	Qty	Description
J	2	Seat Stanchion Bracket Extension <small>(for use with Miami Sun Adult Tri-Wheeler)</small>
K	1	Allen Wrench
L	2	6mm x 21" Rear Strut Extension <small>(for use with Miami Sun Adult Tri-Wheeler)</small>
M	2	6mm x 30" Rear Strut
N	4	4mm x 33" Front Strut (2) and X-Braces (2)
O	2	6mm x 24-1/2" Side Rails For Canopy

Assembly Instructions

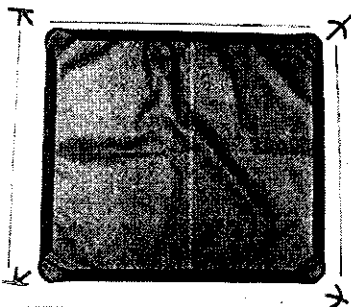


Fig 1

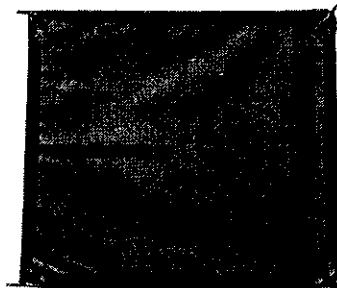


Fig 2

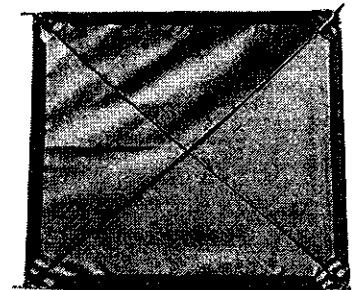


Fig 3

Step 1

Assemble top as shown in Fig. 1 and 2 using:

- A 1-Canvas Cover
- B 2-Front Corner Adapters
- C 2-Rear Corner Adapters

Adjust and tighten setscrews securely.

Step 2

Assemble cross braces as shown in Fig. 3 using:

- N 2-4mm x 33" X-Braces (2)
- Tighten setscrews securely.

Caution: Check all screws and set screws before riding.
Warning: Remove canopy when transporting bike or trike on a vehicle.

Assembly Instructions




Fig 4




Fig 5



Fig 6

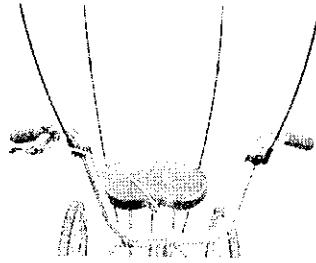


Fig 7

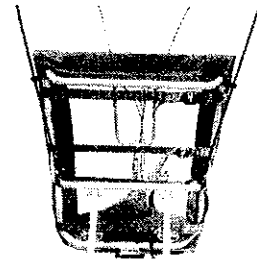


Fig 8

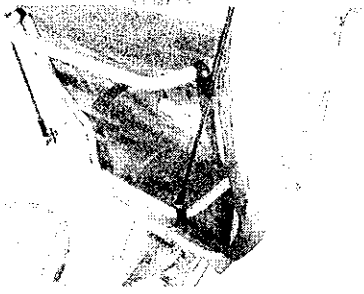


Fig 9



Fig 10

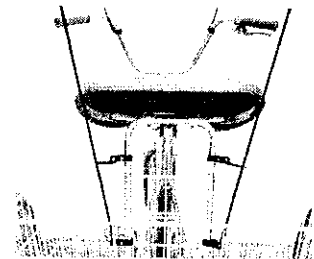


Fig 11

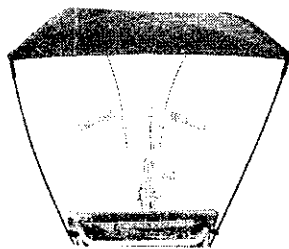


Fig 12

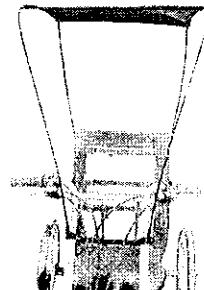


Fig 13

Step 3

Assemble front brace assembly as shown in Fig. 4 using:

D 2-7/8" Handlebar Brackets

E 2-4mm Front Strut Adapter

N 2-4mm x 33" Front Strut (2)

Tighten setscrews securely.

Install onto handle bar as shown in Fig. 6 for

EZ Series or as in Fig. 7 for Miami Sun Adult Tri-Wheeler.

Step 4

(for Miami Sun Adult Tri-Wheeler)

Assemble rear support braces as shown in Fig. 10 using:

G 2-6mm Rear Strut Adapter

H 2-5/8" Rear Strut Bracket

I 2-6mm Couplers (for use with Miami Sun Adult Tri-Wheeler)

J Seat Stanchion Bracket Extension

(for use with Miami Sun Adult Tri-Wheeler)

L 2-6mm x 21" Rear Strut Extension

(for use with Miami Sun Adult Tri-Wheeler)

M 2-6mm x 30" Rear Strut

Install onto seat support as shown in Fig. 11.

Step 4

(for EZ-Series)

Assemble rear support braces as shown in Fig. 5 using:

F 2-5/8" Short Upper Seat Stanchion Bracket

G 2-6mm Rear Strut Adapter

H 2-5/8" Rear Strut Bracket

M 2-6mm x 30" Rear Strut

Install onto seat back as shown in Fig. 8 & 9.

Step 5

Assemble canopy top as shown in Fig. 12 & 13.

Install canopy onto rear struts and tighten setscrews securely.

Install front struts into the front corner brackets of the canopy and tighten setscrews securely.

Adjust front and rear strut brackets to position canopy at desired angle and height.

Tighten all screws and set screws securely.

sun bicycles
www.sunbicycles.com

Caution: Check all screws and set screws before riding.
Warning: Remove canopy when transporting bike or trike on a vehicle.