
To set a new combination, first set the lock to the factory code "0000" to unlock the cable. The numbers should be in line with the raised marks on the lock body as shown below.

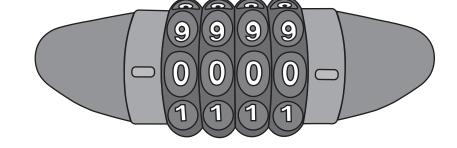

Pull the locking end out of the cable. Then turn the end of the lock mechanism clockwise until it stops.

With the mechanism still turned, set the dials to the desired combination. Then turn the mechanism counter-clockwise back to it's original position. The lock should now be set to your desired combination.

Cycle the numbers and check that it works correctly before locking your bicycle. Make note of the new combination, write it down and store it in a safe place.

The combination can be changed as many times as necessary using the same steps.

Important Information

No lock is 100% theft proof. Most locks are designed to be a theft deterrent rather than a preventative measure. It is important to use the correct lock for the area and duration of time that a bike will be left unattended.

Whenever possible, locks should be used on both the frame and wheels of the bicycle being locked, and always be sure that the object the bike is being locked to cannot be easily moved or manipulated.

Sunlite and the manufacturers of this lock make no claims as to it's security level or degree of theft prevention. Always use common sense when locking your bike.

