


URBAN FRONT RACK

PLEASE READ ALL INSTRUCTIONS BEFORE
INSTALLING YOUR NEW CARGO RACK

WARNING!



FAILURE TO INSTALL ACCESSORIES
PROPERLY MAY RESULT IN SERIOUS
INJURY, DEATH OR WORSE, DAMAGE
TO YOUR BICYCLE!

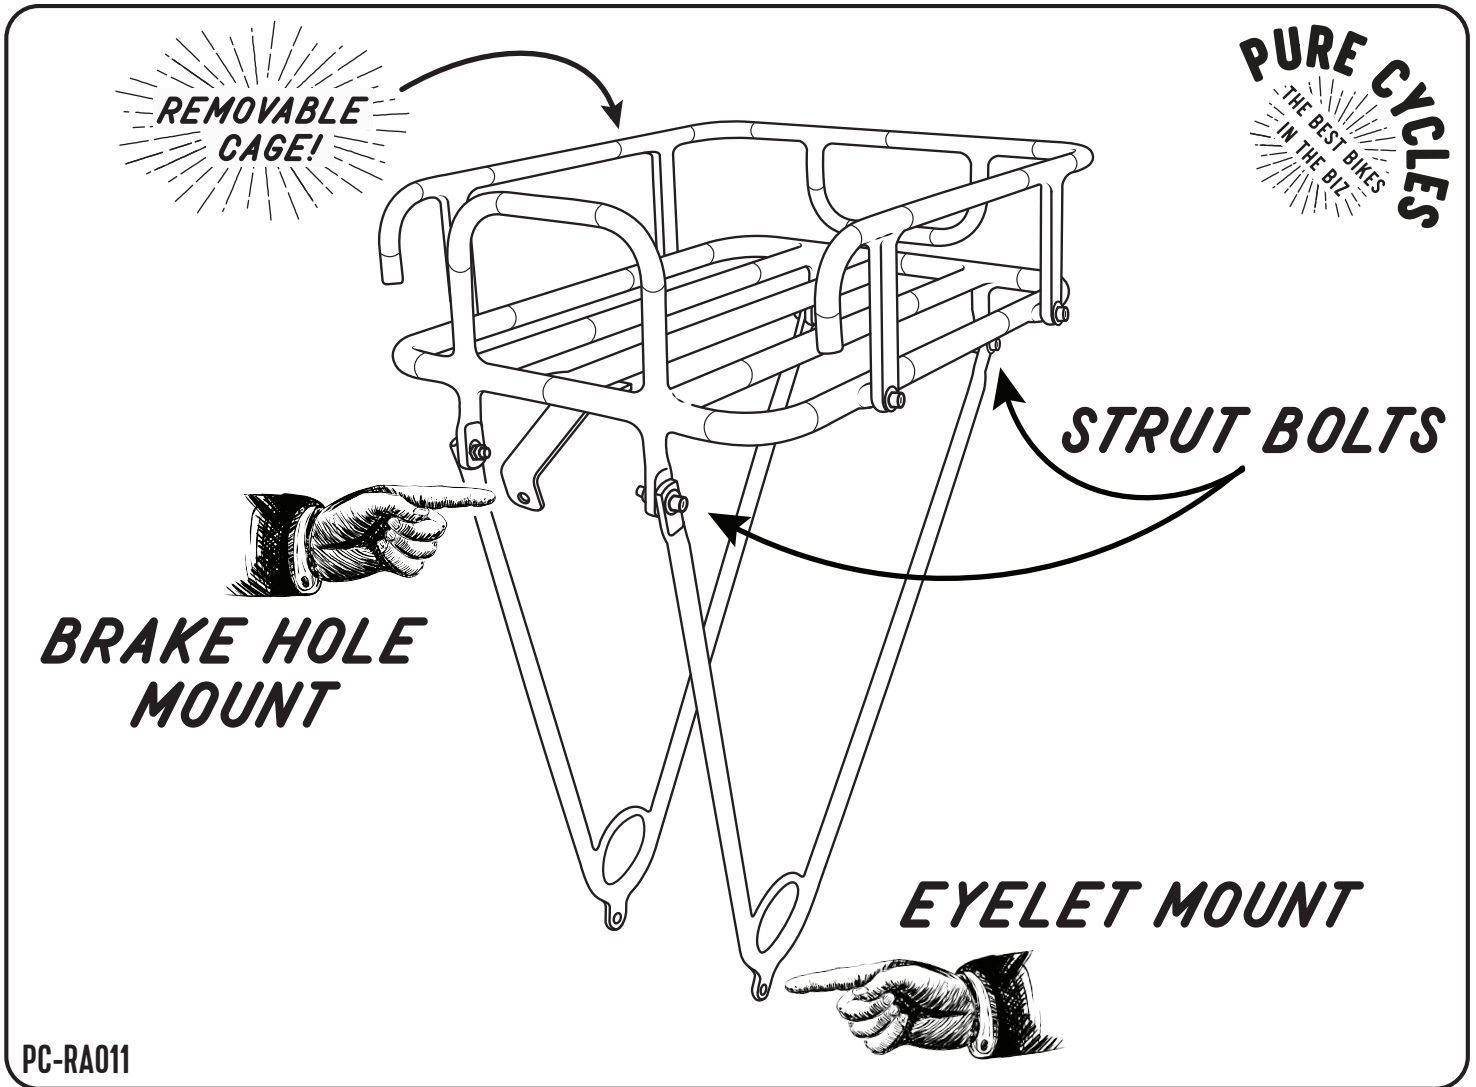

INSTRUCTIONS

REMOVE THE FRONT CALIPER BRAKE IF PRESENT.

• • •

USING THE SUPPLIED HARDWARE, MOUNT THE RACK TO THE EYELETS ON THE FORK NEAR THE AXLE.

• • •

INSTALL THE BRAKE HOLE MOUNT TO THE FORK, IF USING A FRONT BRAKE THE MOUNT SHOULD GO BETWEEN THE CALIPER WASHER AND THE CALIPER ITSELF, NOT DIRECTLY AGAINST THE FORK. IF NO BRAKE IS PRESENT, USE THE INCLUDED SINGLE LONGER BOLT TO INSTALL.

• • •

MAKE SURE STRUT BOLTS, CAGE, AND ALL INSTALLATION POINTS ARE PROPERLY TIGHTENED BEFORE USE.

